

I-bus is available in the connector to ACC and quite simple to connect to.




Grab the slot and pull it out, no tools necessary.



Push the buttons for tcs, and seat heating out from behind, then reach up and push the ACC panel out



Prepare a 9-pin female d-sub connector with three wires (about 25cm/10" of length is quite enough, remember to twist the wires to keep good signal quality), pin 2 is CAN\_L, pin 7 is CAN\_L and either of pin 3 or 6 for signal ground. (only one ground is necessary)

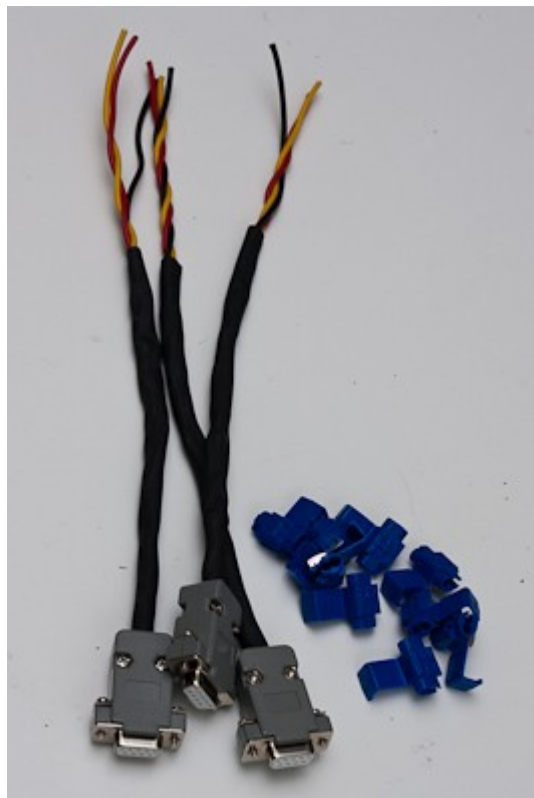



Connect the green wire to your CAN\_H, the white to CAN\_L and black to GND. Crimp, solder or use wire tap connector like in the image.



Reassemble in opposite order and you're done. There's also room to hide the connector behind the slot so you don't have to see it all the time.

